

ELEVATION

CONCRETE SUPPORT AND THRUST BLOCK SEE STD. W-1570

NOTE

SEE WESTERN STANDARD SPECIFICATIONS FOR LIST OF APPROVED TAPPING SLEEVES.


FOR HOT TAPS ON PIPE OVER 12" IN DIAMETER USE FORD FAST-1574 TO 2600

NOTE

PRIOR TO FINAL BACKFILLING, ALL BURIED WATER PIPELINES SHALL HAVE A METALLIC TYPE DETECTABLE MARKING TAPE (TYPE III BY LINEGUARD OR APPROVED EQUAL) PLACED ONE (1) FOOT ABOVE PIPELINE LOCATION.

INSTALL TEE AND VALVE PER WESTERN STD PLAN NO. W-0155.

ALL FLANGE BOLTS/NUTS TO BE WAX TAPED WRAPPED WITH TRENTON OR EQUAL.

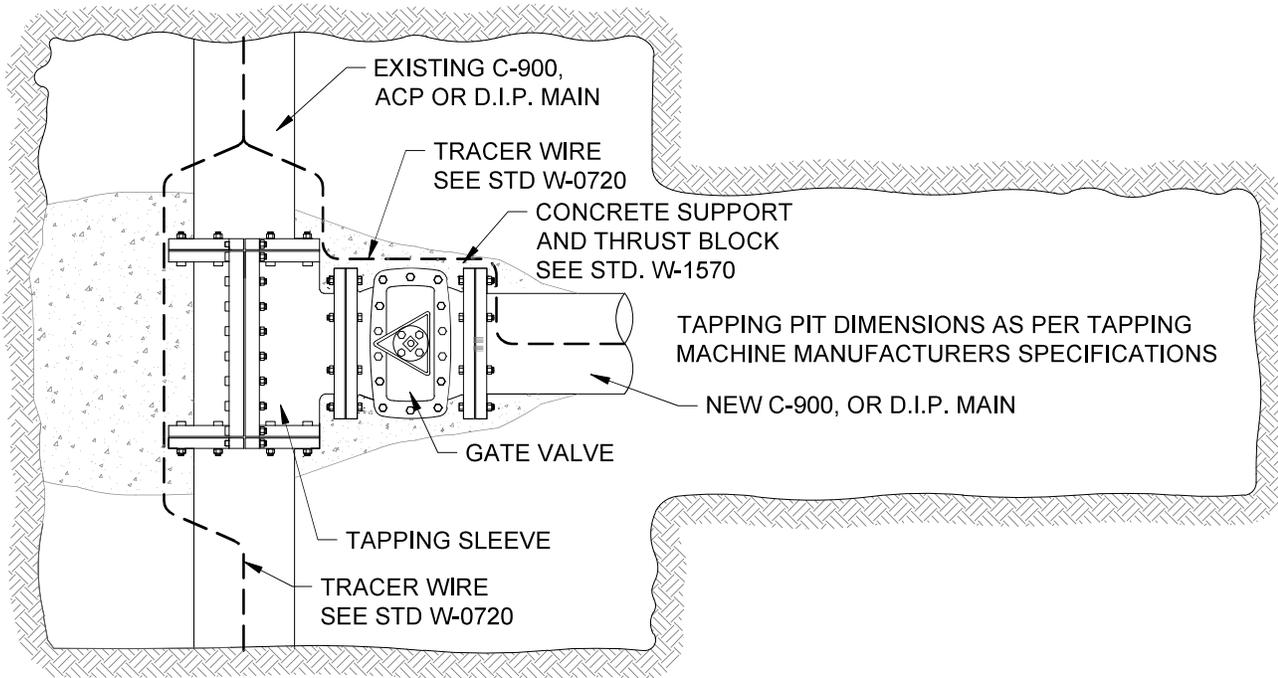

PLAN VIEW

THIS INSTALLATION MUST BE APPROVED BY THE DIRECTOR (SPECIAL USE APPLICATION ONLY)

CONTRACTOR PERFORMING ACTUAL HOT TAP MUST BE APPROVED BY WESTERN PRIOR TO STARTING WORK